

Operation and installation manual

SeasyParticle 230

Particle counter for compressed air and gases



Contents

II. Contents

- II. Contents 2**
- 1 Safety advice 3**
 - 1.1 Important notes 4**
- 2 Introduction 5**
- 3 Service 5**
- 4 Principles of functioning 6**
- 5 Initiation 7**
 - 5.1 Voltage supply 7**
 - 5.2 Connection to the compressed air system (gas supply system) 8**
 - 5.2.1 Zero test 8**
 - 5.3 Measurement procedure 9**
 - 5.4 Status displays 9**
- 6 Connection of the RS 485 interface 10**
 - 6.1 Connection of the RS 485 interface to a DS 500 10**
 - 6.2 Connection of the RS 485 interface to a DS 400 10**
- 7 Operation of the particle counter with the chart recorder DS 500 12**
- 8 Operation of the particle counter with the multifunction measuring instrument DS 400 13**
- 9 Operation of the particle counter SeasyParticle 230 with a DS 500 mobile in the mobile unit for measurement of compressed air quality according to ISO 8573 – residual oil – particles – moisture 14**
- 10 Technical data 15**

1 Safety advice



Please check whether or not these instructions correspond to the device type.

Please adhere to all advice given in these operating instructions. They include basic information which needs to be observed during installation, operation and maintenance. Therefore, it is vital for the technician and the responsible operator/skilled personnel to read these operating instructions prior to installation, start-up and maintenance.

The operating instructions must be accessible at all times at the place of application of SeasyParticle 230.

In addition to these operating instructions, local and national regulations need to be observed where required.

If you have any queries regarding these instructions, please contact Seasy Instruments.



Danger!

Supply voltage!

Contact with non-insulated parts carrying supply voltage involves the risk of an electric shock resulting in injuries and death.

Measures:

- Observe all regulations in effect during electrical installation (e. g. VDE 0100)!
- **Carry out maintenance works only when the device is de-energized!**
- Any electrical works must only be carried out by authorized and skilled personnel.



Danger!

Inadmissible operating parameters!

Under-running or exceeding the limit values involves risks for persons and the material and malfunction and service failures may occur.

Measures:

- Make sure that SeasyParticle 230 is operated only within the permissible limit values indicated on the type plate.
- Exact compliance with the performance data of SeasyParticle 230 in connection with the case of application.
- Do not exceed the permissible storage and transport temperature.

Further important safety advice:

- During installation and operation, the national regulations and safety instructions in force also need to be observed.
- SeasyParticle 230 must not be employed in hazardous areas.

Additional advice:

- Do not overheat the device!



Caution!

Malfunction in SeasyParticle 230

Through incorrect installation and poor maintenance, a malfunction may occur in SeasyParticle 230, which may affect the measuring results and lead to misinterpretations.

Introduction

1.1 Important notes

Our particle counters are highly sensitive optoelectronic devices which require a special and careful handling. Therefore please read through the following annotations and advices carefully. This will help you to save unnecessary problems and costs.

Measuring media:

Suitable measuring media are: Air and all other non-explosive, non-corrosive, non-aggressive gases whose temperature should not exceed 40 °C, as far as the maximum particle concentration (please see technical data) is not exceeded (in case of doubt please use a dilution factor!!!).

Sensor system:

In case of a nonuse of the device the suction nozzle should be closed by means of a zero filter (HEPA CAP) or a closing cap in order to avoid a soiling of the sensor system. This especially applies to the transport and the storage of the instrument.

Please observe the following when putting the device into operation again:

The pump should only be switched on when the closing cap has been removed since this may lead to damages at the pump. Furthermore, the instrument should not be exposed to any mechanical shock since this may lead to a misalignment of the optics.

Location:

The instrument should be installed at a vibration-free location with a sufficient heat release, extreme climate conditions (heat, moisture) should be avoided.

General matters:

The instrument should only be opened by authorized, skilled service staff since otherwise any warranty expires.

2 Introduction

The particle counter SeasyParticle 230 is used for determination of the particle concentration in gaseous carrier media. It is equipped with a laser diode as a light source. The particle detection is effected sidewise via a 90° optics. The transfer of the measured data is effected via the integrated RS 485 interface (Modbus protocol).

3 Service

Our products are thoroughly examined and tested after production. The primary calibration was carried out with latex particles and the compliance of the calibration is confirmed on the calibration label on the back side of the instrument.

The annual recalibration of the instruments with latex particles can be carried out either at the premises of the customer or on our premises.

4 Principles of functioning

The optical particle counters described in this manual use the scattered light effect for determination of the particle size and the concentration of aerosol particles. The particles are illuminated with the laser light. The intensity of the scattered light which is emitted by the particle under different angles is measured and used as a parameter for determination of the particle diameter. As soon as an aerosol particle passes through the measuring cell its scattered light gets to a photo element (photo diode) via a collective lens system. The electronic pulse which is generated is strengthened and allocated to a pre-selected size range in the microprocessor system. The pulses counted in a pre-selected time span are related to the volume flow of air (28.3 l/min., or 2.83 l/min.).

When evaluating the counted particles mainly two terms are used which require a more detailed explanation:

- **cumulative** (cumul.) = the number of particles which are bigger than the particle diameter given in the respective channel.

- **distributive** (distr.) = the number of particles which are bigger than the particle diameter given in the respective channel but smaller than the (bigger) particle diameter given in the next channel.

According to the factory setting SeasyParticle 230 gives the measured values distributively.

5 Initiation

After removing the transportation packaging please place the particle counter SeasyParticle 230 at first horizontally onto a vibration-free surface near a mains socket. However, please avoid lines at which large electric motors or devices with strong electrical interferences are operated. Please use the instrument in no case near devices with stray radiances or heat radiation (e. g. blowers and heating devices).

5.1 Voltage supply

The voltage supply is effected via the mains unit which is included in the shipment.

In case of any voltage supply via third-party mains units please observe the following requirements:
18...36 VDC / 0,75 A

Initiation

5.2 Connection to the compressed air system (gas supply system)

The particle counter SeasyParticle 230 is connected to the compressed air system/gas supply system via the supplied pressure controller (please see photo below).

5.2.1 Zero test

If a zero test should be carried out before starting the measurement the zero filter has to be inserted behind the pressure controller before connecting SeasyParticle 230 to the compressed air system/gas supply system. This serves for a zero test of the sensor and avoids a pollution of the optics.



Important: The pressure at the particle counter SeasyParticle 230 is not allowed to exceed 1.6 bar over-pressure. The pressure has to be reduced correspondingly by means of the supplied pressure controller.

Initiation

5.3 Measurement procedure

Before starting the measuring procedure the zero filter which possibly has been inserted in front of the SeasyParticle 230 for zero test has to be removed.

Please observe that no rough objects, smoke (also testing tubes from flow meters) or liquids get into the optics. The optical system is the most sensitive part of the instrument and has to be disassembled, cleaned, mounted, adjusted and calibrated completely after the entry of the above mentioned materials. This time expenditure can be avoided by careful handling. Please avoid an exposition of the instrument by cigarette smoke. Furthermore, please avoid air resp. gas samples which contain more particles than the specified maximum particle concentration (please see technical data).

The measurement procedure starts immediately after connecting SeasyParticle 230 to the power supply.

The LED „Power“ (red) and „Laser“ (green) show the proper condition of SeasyParticle 230.

5.4 Status displays


Power:	Lightens up if supply voltage is connected
Meas.:	Lightens up if the instrument is in measuring mode (counter is active). If this light expires the particle counter is in the rinsing stage.
Laser:	Lightens up if the laser power is within the tolerance.
Flow:	The green LED of the three colours luminous row display shows the correctly adjusted flow (sampling) and the following indications: green = OK yellow = within tolerance red = out of tolerance



Initiation


6 Connection of the RS 485 interface

The particle counter SeasyParticle 230 disposes of a 9 pole Sub-D socket. The 9 pole Sub-D plug is included in the shipment.

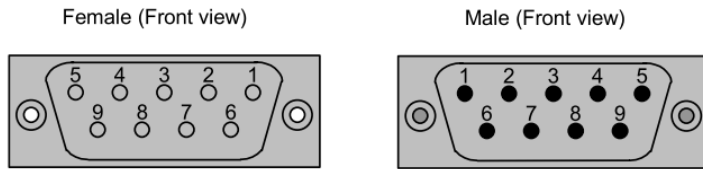


PIN assignment: PIN 1: Common
 PIN 5: B
 PIN 9: A

6.1 Connection of the RS 485 interface to a DS 500

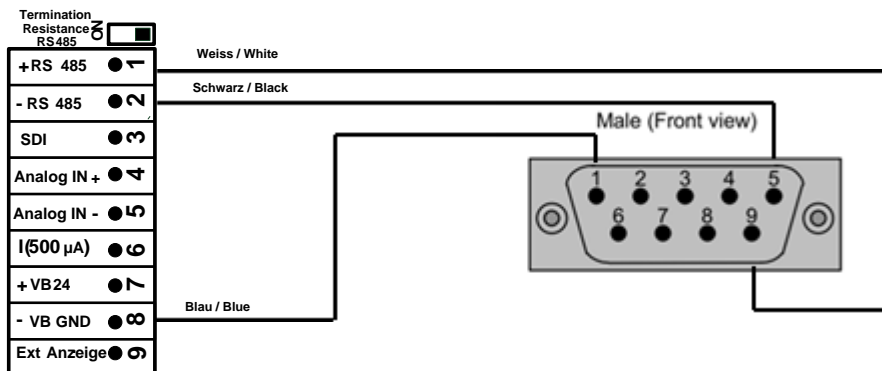

6.2 Connection of the RS 485 interface to a DS 400

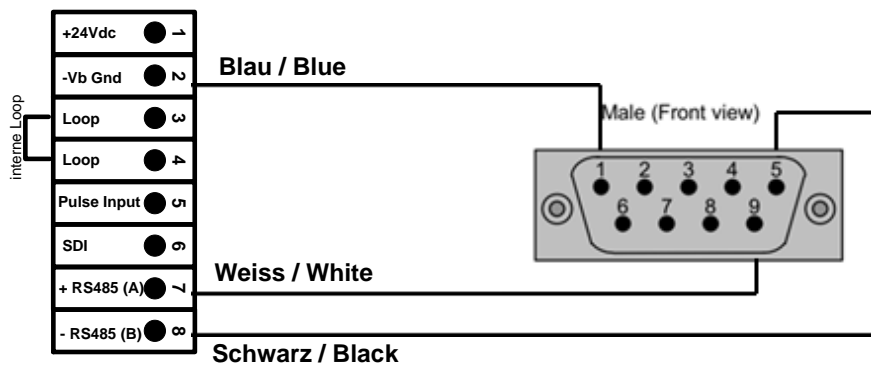

7 Operation of the particle counter with the chart recorder DS 500



The data transfer of the measured data between particle counter SeasyParticle 230 and DS 500 is effected via a digital RS 485 interface (Modbus protocol).

The particle counter SeasyParticle 230 is stored as a sensor in the sensor selection list in DS 500. For sensor selection in DS 500 please proceed as follows:

Main menu → Settings → Sensor settings → A1



If still no sensor has been configured, the *Type No Sensor* appears.

By pushing the description field *Type No Sensor* the list of sensor types appears (see next step).

Select sensor type “SeasyParticle 230“ in the selection list.

For detailed information please see instruction manual DS 500.


8 Operation of the particle counter with the multifunction measuring instrument DS 400



The data transfer of the measured values between SeasyParticle 230 particle counter and DS 400 is effected via a digital RS 485 interface (Modbus protocol).

The particle counter SeasyParticle 230 is stored as a sensor in the sensor selection list in DS 400. For sensor selection in DS 400 please proceed as follows:

Main menu → Settings → Sensor settings → A1

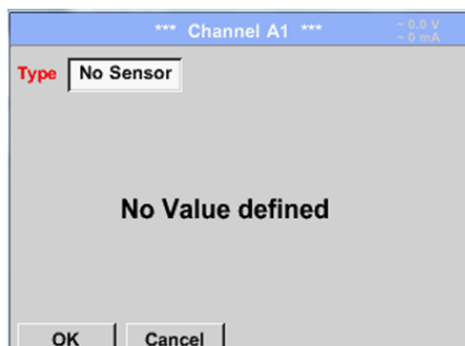

If still no sensor has been configured, the *Type No Sensor* appears.

By pushing the description field *Type No Sensor* the list of sensor types appears (see next step).



Select sensor type “SeasyParticle 230” in the selection list.

For detailed information please see instruction manual DS 400.

9 Operation of the particle counter SeasyParticle 230 with a DS 500 mobile in the mobile unit for measurement of compressed air quality according to ISO 8573 – residual oil – particles – moisture



The connection of SeasyParticle 230 to DS 500 mobile is effected via the 5 meters connection cable (order no. 0553.0501).

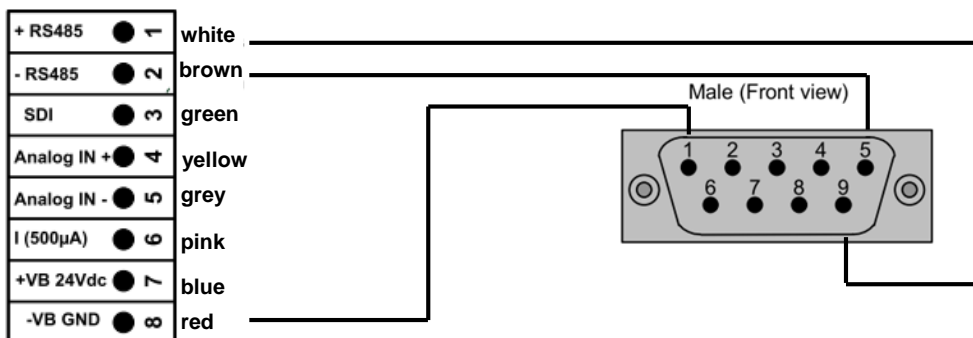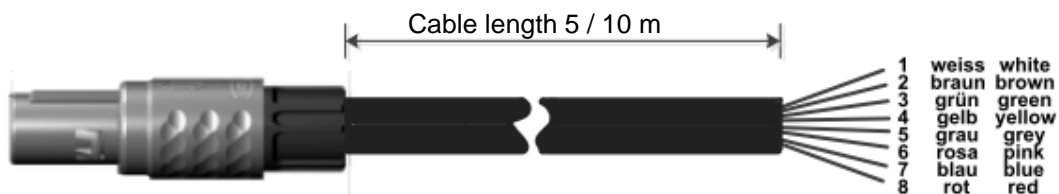

Technical data

10 Technical data

	SeasyParticle 230(0.1µm...5 µm)	SeasyParticle 230(0.3 µm...5 µm)
Measuring range	0.1 µm...5 µm	0.3 µm...5 µm
Channels	0.1...0.5 µm 0.5...1 µm 1...5 µm	0.3...0.5 µm 0.5...1 µm 1...5 µm
Counting accuracy acc. to ISO 21501-4	50% at 0.1 µm 100 at > 0.15 µm	50 % at 0.3 µm 100 % at > 0.45 µm
Max. concentration	1 million. / 1 CFM	
Light source	Laser diode	
Zero counting	According to ISO 21501-4: < 1 counting / 5 min.	
Flow rate	1 CFM / 28.3 L/min	
Flow generator	Overpressure in compressed air system / pressure reducer	
Calibration	According to ISO 21501-4: Latex-Aerosol	
Interface	RS 485 (Modbus protocol)	
Dimensions D x W x H [cm]	15 x 20 x 30	
Weight [kg]	8	

上海萨海测量技术有限公司
电话: 021-6236 2960
传真: 021-5235 2321
邮箱: sales@seasy-ist.com
网址: www.seasy-ist.com